

RODEX



INSTRUCTION MANUAL



ELECTRICAL CHAINSAW

RDX906 / RDX9055 | ITEM NO: X906 / X9055

TR: 02-05

EN: 06-09

CE EAC



RODEXPOWER.COM




RODEXTOOLS

TÜRKÇE

ELEKTRİKLİ AĞAÇ KESME MAKİNASI RDX906 – RDX9055 / X906 – X9055

TANITMA VE KULLANIM KILAVUZU

TEKNİK VERİLER / MODEL		RDX906	RDX9055
GİRİŞ GÜCÜ	W	2400	2000
VOLTAJ	V	230	230
Frekans	Hz	50-60	50-60
BIÇAK UZUNLUĞU	MM	400	400
KESİM HIZI	M/SN	13.1	15
ZİNCİR	Diş	28,5	28,5
Ağırlık	(kg)	5,75	5,75

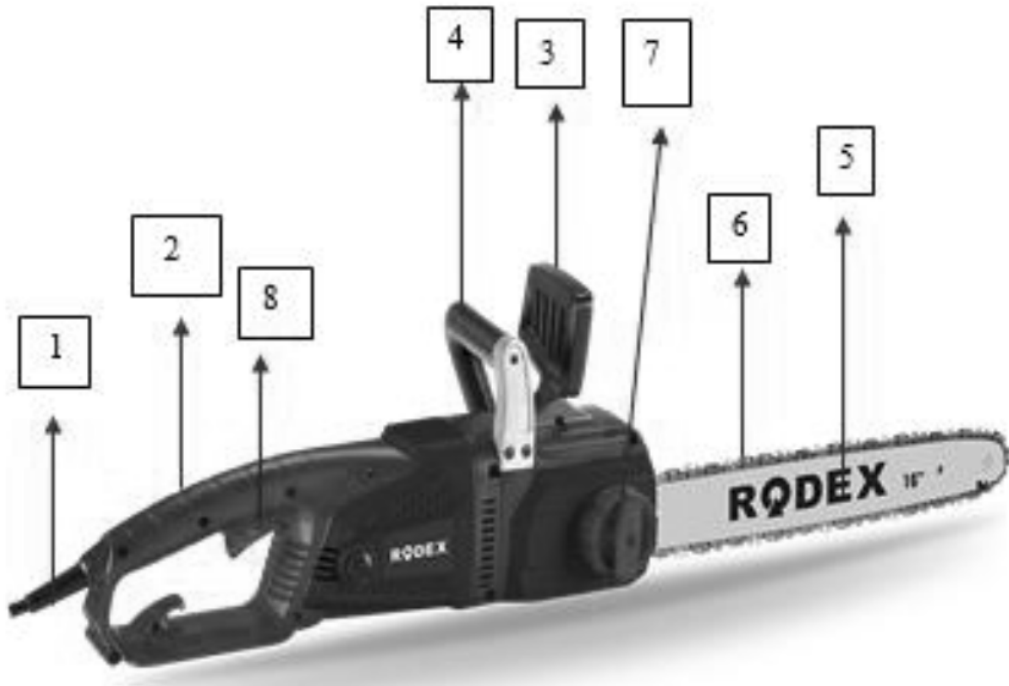

CİHAZIN ÜNİTELERİ

1. ELEKTRİK KABLOSU
2. TUTMA KOLU
3. EL SİPERİ (FREN KOLU)
4. ÖN TUTMA KOLU
5. KLAVUZ
6. TESTERE ZİNCİRİ
7. ZİNCİR GERDİRME ANAHTARI
8. ÇALIŞTIRMA ANAHTARI

KULLANIM ALANI

Elektrikli zincir testere makinamız ağaç veya odun kesilmesi için tasarlanmıştır.

NOT: BU ÜRÜN AMATÖR AMAÇLI KULLANIMLAR İÇİN UYGUNDUR.

Kullanmadan önce, lütfen bu bilgileri okuyun.

1.GÜVENLİK TALİMATLARI

Dikkat! Aletleri kullandığınız zaman, yangın riskini, elektrik çarpmasını ve insanlara verilecek zararları asgariye indirmek için, her zaman için bütün güvenlik talimatlarına uyulmalıdır, aleti çalıştırmadan önce, lütfen bütün bu talimatları okuyunuz;


Güvenlik Talimatları:

- Elektrik çarpması, yaralanma ve yangın risklerinden korunmak için aşağıdaki bilgilere dikkat edin.
- Mevcut şebeke voltajının alet tip levhası üzerindeki bilgilerle aynı olup olmadığını kontrol edin.
- Kabloyu yalnızca motor kapalıyken prize takın.
- Elektrik çarpmasına karşı kendinizi koruyun. Metal boru, radyatör, elektrikli ocak, buzdolabı vb. Gibi topraklanmış aletlere dokunmaktan kaçın.
- Aşırı sıcaklık farkı elektrik ileten parçalar su damlacıklarının oluşmasına yol açar. Aleti çalıştırmadan önce aletin çalışacak yerdeki ortam sıcaklığına gelmesini bekleyin.
- Makinaları, aletleri ve tavsiye edilen aksesuar parçaları kullanım klavuzundaki yönetmeliklere göre ve yalnızca amacına uygun alanlarda kullanın.
- Testereyi kullanırken uygun giysiler giyin ve koruyucu ekipmanlar takın. Kaymayan ayakkabı ve eldiven giyin.
- Elektrikli aletleri nem ve yağmura karşı koruyun. Kesinlikle suyun içine sokmayın.
- Açık havada çalışırken yalnızca bu şartlarda çalışmaya izin verilmiş alet ve uzatma kablolarını kullanın.
- Aletleri patlama tehlikesi bulunan yerlerde çalıştırmayın.
- Aletin üçüncü kişilere verilirse bu kullanım kılavuzunda verilecektir.
- Tamir çalışmaları sadece kalifiye kişiler tarafından ve orjinal parçalar kullanılarak yapılacaktır.
- Elektrikli aletleri çocuklardan uzak tutun.
- Elektrikli aletleri orjinal ambalajları içinde ve çocukların erişemeyeceği yerlerde saklayın.

UYARI : Alkol, ilaç ve uyuşturucu maddeler ile hastalık, ateşli haller ve yorgunluk reaksiyon kabiliyetinizi etkileyebilir. Bu durumlarda elektrikli aletleri kullanmayın.

- Aleti kullanmadığınızda, mola verdiğinizde, ayar çalışmalarında, aksesuar değiştirmede ve bakım çalışmalarında daima kablo fişini prizden çıkarın.
- Elektrikli aletleri kesinlikle kablosundan tutarak taşımayın. Fişi prizden çıkarırken kesinlikle kablosuna asılarak çıkarmayın.
- Motorları yük altında durdurmayın.
- Çalışma alanınızı düzenli tutun.
- Çalışırken anormal vücut hareketlerinden kaçının.
- Makinanın istenmeden devreye sokulmasını veya yol almasını önleyin.
- Takım anahtarlarını ve ayar yardımcı aletlerini takılı bırakmayın.
- Bu talimatta bulunan karakteristik bilgilere uymayan elektrikli ağaç testereleri kullanmayınız.
- Kesmeye başlamadan önce parçadaki bütün çivi ve metal parçaları çıkartınız.
- Makine devir sayısına tam olarak ulaşmadan önce asla kesmeye başlamayınız.
- Makineyi kapattıktan ve testere zincirinin dönmesi durduktan sonra elinizden bırakınız.
- Bakım işlerinde daima elektrik fişini çekiniz.
- Motor çalışırken testere palasının ucu herhangi bir nesneye dokunduğu anda geri tepme olabilir. Uç kısmın teması anında, hızlı geri reaksiyon olarak kıvılcım ortaya çıkabilir ve kontrol kaybıyla testere geri teperek kullanıcıya zarar verebilir.

KILAVUZUN VE TESTERE ZİNCİRİNİN MONTAJI

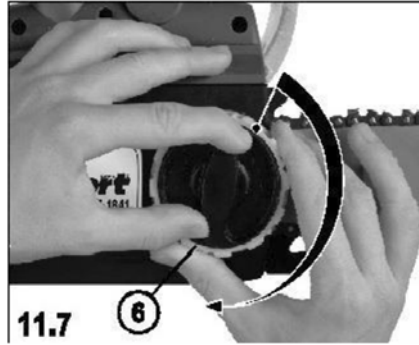

Montaj için, zincir tertibat kapağını çıkartın. Testere kılavuzunun (Pala) ve testere zincirinin montajı sırasında testerenin kesme yönünü kontrol edin. Kesme yönü kılavuzun üzerinde ok işaretiyle gösterilmiştir. Kesme yönünü belirlemek için belki testere zincirini pala üzerinde döndürmek gerekli olabilir. Kılavuzu dik tutarak, testere zincirini, kılavuza yerleştirin. Zincirli kılavuzu, kılavuz yuvasına yerleştirin. Testere zincirini de zincir çarkına yerleştirin ve doğru yerleştirildiğinden emin olun. Ardından kapağı tekrar takın ve montaj butonunu sıkın.

TESTERE ZİNCİRİNİN GERİLMESİ

Testere zincirinin kılavuza yerleştirildiğinden emin olun. Uygun zincir gerginliğine ulaşana kadar zincir germe vidasını saat yönünde çevirin.

Gerginliği tekrar kontrol edin. Zinciri çok fazla germeyin. Soğuk havalarda, testere zinciri, palanın orta kısmından yaklaşık 5mm çekilebilecek kadar gevşeyebilmektedir. Somunu güvenli bir şekilde sıkın. Sıcak havalarda zincir genleşir, gevşer ve kılavuzdan çıkarak tehlike oluşturabilir. Sıcak havalarda zincir gerginliğini tekrar ayarlayın. Çalışma bittikten sonra testere zinciri gevşemiş olabilir.

ZİNCİR YAĞININ DOLDURULMASI

Yağ tankının içine toz veya talaş kaçmaması için, yağ kapağını (9), açmadan önce temizleyin. Yağ doldurduktan sonra, yağ kapağını kapayın ve dökülen yağ varsa temizleyin. Çalışma esnasında da yağ göstergesini kontrol edin.

ZİNCİR YAĞLAMA SİSTEMİ

Aşırı derecede aşınmalara karşı çalışma esnasında makinadaki yağlamanın devamlı olarak devrede olması gerekmektedir. Asla yağlama olmadan çalışmayınız. Aksi takdirde kesici kısımlar hasar görecektir. Bunun için her kullanımdan önce yağlamayı ve yağ göstergesini kontrol ediniz.

KESME İŞLEMİNE BAŞLANGIÇ

Testereyi sadece açık havada kullanıma uygun şekilde yalıtım ve bağlantılara sahip tasarlanmış uzatma kablolarıyla kullanın. Makinayı çalıştırmak için sol elinizle ön tutma sapını, sağ elinizle de arka tutma sapını kavrayın.

Çalıştırmak için: Açma tetiğine ve güvenlik pimine eş zamanlı basın. Zincir freninin düzgün çalışıp çalışmadığını kontrol edin. Makinenin açma/kapama tetiğine bastığınız anda makine yüksek hızda çalışmaya başlayacaktır.

Durdurmak için: Makinayı durdurmak için elinizi tetikten çekin ve testere dönmeyi tamamen durduğu zaman makinayı yerine koyun.

BAKIM TEMİZLİK

Makine üzerinde bir çalışma yapmadan önce şebeke fişini prizden çekin.

Kömür fırçalarını düzenli bir şekilde kontrol edin. Kömür fırçalarını daima çift olarak değiştirilmelidir.

İyi ve güvenli çalışabilmek için aleti ve havalandırma aralıklarını daima temiz tutun.

Titiz üretim ve test yöntemlerine rağmen alet arıza yapacak olursa, onarım, „**RODEX**“ elektrikli el aletleri için yetkili bir serviste yaptırılmalıdır.


ENGLISH

ELECTRICAL CHAINSAW

RDX906-RDX9055 / X906-X9055

INSTRUCTION MANUAL AND USER GUIDE

TECHNICAL DATA / MODEL	RDX906	RDX9055
INPUT POWER W	2400	2000
VOLTAGE V	230	230
FREQUENCY Hz	50-60	50-60
GUIDE BAR SIZE MM	400	400
CUTTING SPEED M/SN	13.1	15
CHAIN TEETH	28,5	28,5
WEIGHT Kg	5,75	5,75

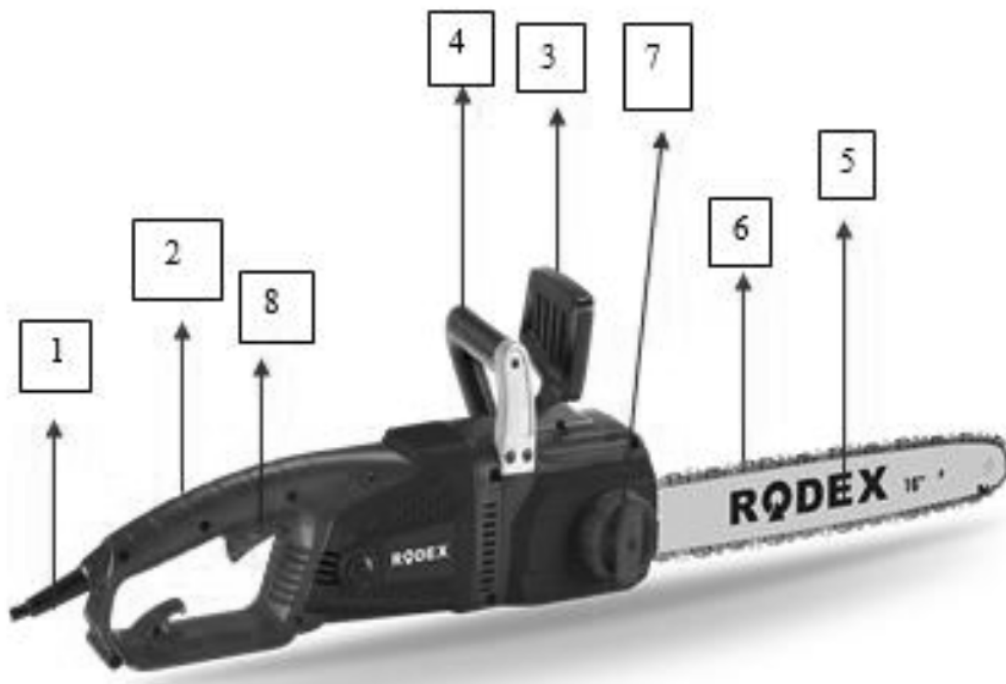

THE TOOL'S UNITS

1. MAIN CABLE
2. HANDLE
3. BRAKE LEVER
4. REAR HANDLE
5. GUIDE BAR
6. CHAIN
7. SDS
8. ON/OFF SWITCH
9. OIL OUTLET

USING AREA

Your electric chain saw has been designed for sawing trees and big wooden logs.x''



WARNING – To reduce the risk of injury, user must read instruction manual

1. GENERAL POWER TOOL SAFETY WARNINGS

Read all instructions failure to follow all instructions listed below may result in electric shock, fire and/or injury.

- The voltage of the power source must agree with the value given on the nameplate of the machine.
- Before using the tool, check the tool and it's power connections if there is any damagement.
- Don't connect the plug to power source when switch is on.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Extreme temperature differences cause water droplets on power conducting parts.
Before switch on the tool, wait tool to get same temperature with working room temperature.
- Use the power tool, accessoires and tool bits etc. In accordance with these instructions and in the manner instended fort he particular type of power tool, taking into account the work conditions and the work to be performed. Use of the power tool for operations different from intended could result in a hazardous situation.
- Use safety equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate.
- Do not expose power Tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- When power tool is given to other people, this instruction manual must be also given with power tool.
- Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

WARNING: Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs,


alcohol or medication. A moment of inattention while operating power Tools may result in serious personal injury.

- Keep the Tools out of reach of children.
- Store idle power Tools out of the reach of the children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.
- Disconnect the plug from the power source before making and adjustments, changing accessoires or storing power tools. Such preventative safety measures reduce the risk of starting the power tools accidentally.
- Never use the cord for carrying, pulling or unplugging the power tool.
- Don't switch off the tool when it is on load.
- Keep work area clean and well lit. Cluttered and dark areas invite accidents.
- Avoid the anormal body moving, when operating tools.
- Avoid accidental starting. Ensure the switch is in the off position before plugging in power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not use the electric chain saw which is not available for specific informations in this instructions.
- Do not begin to cut, before the machine reaches speed exactly.
- Put machine anywhere after only switch is off and the blade is exactly stopped.
- Always pull the mains plug.
- Kickback may ocur when the nose or tip of the guide bar touches an object or when the wood closes in and pinches the saw chain in the cut. Tip contact in some cases may cause a lightning fast reverse reaction, kicking the guide bar up and back towards the operator. Pinching the chain along the top of the guide bar may push the guide bar rapidly back towards to the operator. Enter of these reaction may cause you to löse control of the saw, Which could result in serious personal injury.

ASSEMBLING THE GUIDE BAR AND SAW CHAIN

To assemble, first unscrew the easy loosening button and remove the brake housing hood. Before assembling the chain bar with the saw chain, check the cutting direction of the teeth. The running direction is marked with an arrow on the hood. To determine the direction of cut, it may be necessary to turn over the saw chain. Hold the chain bar vertically with the tip pointing upwards and put on the saw chain, beginning at the tip of the bar. Then assemble the chain bar with the saw as follows: Place the chain bar with the saw chain on the sword guide. Place the saw chain round the chain Wheel and make sure it correctly mounted. Place the hood on top and tighten gently with the nut.

FILLING IN CHAIN OIL

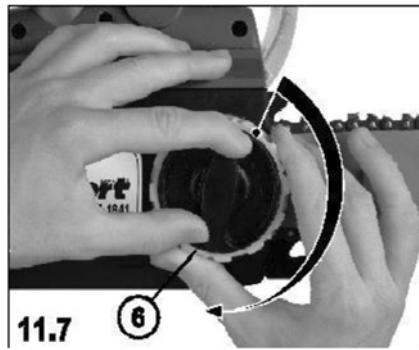

To prevent dirt getting inside the tank, clean the oil tank cap before opening. Check the contents of the oil tank during sawing work by checking the oil gauge. Close the oil tank cap tightly and wipe away any spills.

CHAIN LUBRICATION

To prevent excessive wear, the saw chain and chain bar must be evenly lubricated during the operation. Lubrication is automatic. Never work without chain lubrication. If the chain runs dry, the entire cutting apparatus will quickly become severely damaged. It is therefore important to check both chain lubrication and the oil gauge before every use. Never use the saw when the oil level is below the “minimum” mark.

STARTING THE OPERATION

Use the saw only with approved extension cables which have the prescribed insulation and connections designed for outdoor use (approved rubber-sheathed cables) and which fit the machine plug. To switch on, hold the front grip with your left hand,, the rear grip with your right hand.

To switch on: Simultaneously press the safety lock-off and ON/OFF switch. Check to ensure the chain brake is working properly. After switch on, the chainsaw will run immediately at high speed.

To switch off: Release the ON/OFF switch. Only put down the chain saw after the chain has stopped rotating.

MAINTENANCE AND CLEANING

Before any work on the machine itself, pull the mains plug.

Check the carbon brushes regularly. Carbon brushes must be changed in pairs.

For safe and proper working, always keep your machine and the cooling vents on the motor housing clean and unobstructed.

If the machine should happen to fail despite the care taken in manufacture and testing, repair should be carried out by an authorized customer services agent for **“RODEX” Power Tools.**